

Tech Specs

© ICPI Tech Spec • Interlocking Concrete Pavement Institute • All rights reserved.



ICPI's mission is to deliver education and technical guidance leading to awareness, acceptance and use of segmental concrete pavement systems in the United States and Canada. ICPI has developed Tech Specs to support this mission.

Distribution of ICPI Tech Specs in South Africa is sponsored by:



The Interlocking Concrete Pavement Institute (ICPI) is the authority for concrete pavers and slabs in North America, bringing together producers, contractors, dealers/distributors, industry suppliers and designers in an industry-wide effort to create high-quality products and deliver the best results for both residential and commercial customers. ICPI members represent the top segmental concrete paver and slab producers in North America and other countries like South Africa.



Maintenance Guide for Permeable Interlocking Concrete Pavements

Introduction

Permeable interlocking concrete pavements (PICP) are a proven method for reducing stormwater runoff and pollutants while supporting pedestrian and vehicular traffic. Many laboratory and in-situ research projects over the past two decades by universities, government stormwater agencies, and industry have demonstrated significant runoff and pollutant reductions with cost-saving benefits. The U.S. Federal Highway Administration www.fhwa.dot.gov/pavement/concrete/pubs/hif15006.pdf has published information supporting PICP use in walkways, plazas, driveways, parking lots, alleys and streets.

Like all stormwater control measures, PICP requires maintenance as it traps sediment on its surface not unlike an air conditioning filter. Larger particles are initially trapped while allowing water to pass. Some enter the jointing stone and are trapped there. The jointing stone with larger particles eventually captures smaller particles and this decreases the infiltration rate over time. While still infiltrating water, many smaller particles are trapped within the surface and interior joints. Smaller particles are trapped and eventually decrease infiltration which results in surface ponding.

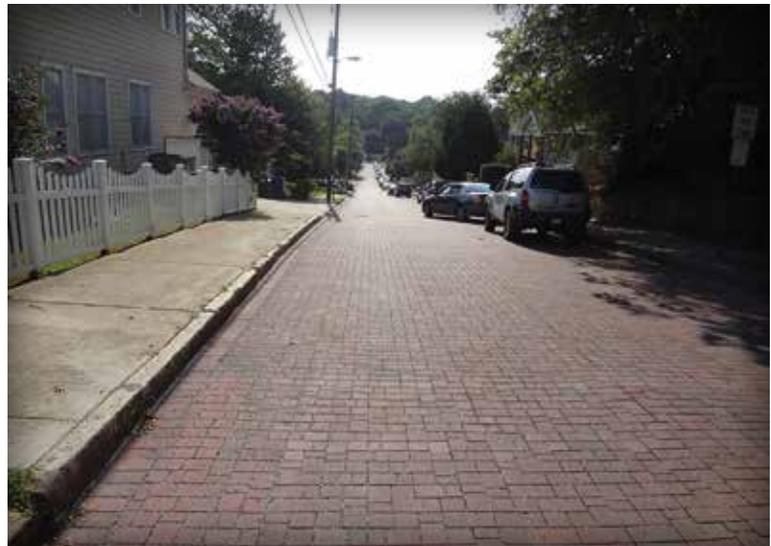


Figure 1. PICP is seeing increased use in municipal streets to reduce stormwater runoff, local flooding, storm pipe upsizing, and combined sewer overflows. These streets are in Atlanta, GA.



Figure 2. Sand-filled joints and bedding common to interlocking concrete pavement **are not used** in PICP.

Every PICP site varies in sediment deposition onto its surface, particle size distribution, and the resulting cleaning frequency. For example, beach sand (a coarse particle size distribution) on the surface will not clog as quickly and require less effort removing than fine clay sediment. Besides the particle size distribution, the rate of surface infiltration decline also depends on the traffic, size, and slope of a contributing impervious area, adjacent vegetation and eroding soil, paver joint widths and jointing stone sizes. ICPI offers a PICP site selection tool on www.icpi.org/resource-library/software-programs to help identify favorable sites and avoid one that may incur additional maintenance.

While routine maintenance assures long-term infiltration, surface infiltration can be restored from neglected maintenance. A significant advantage of PICP is its ability to remove settled or wheel-packed sediment in the joints. This Tech Spec provides guidance on routine and restorative maintenance practices that support surface infiltration. This bulletin also provides guidance on maintaining the surface as an acceptable pedestrian and vehicular surface.

Practices Supporting Surface Infiltration

PICP design and construction that complies with ICPI guidelines are fundamental to long-term surface infiltration. Guidelines are found in the ICPI manual, *Permeable Interlocking Concrete Pavements* and in *ICPI Tech Spec 18—Construction of Permeable Interlocking Concrete Pavements* available on www.icpi.org. Some essential characteristics described below support continued infiltration.

PICP doesn't use sand. Unlike interlocking concrete pavements, sand jointing or bedding materials to support pav-

ing units and dense-graded aggregate bases are not used in PICP. Sand joints and bedding allow very little water to enter and often eventually clog for traffic borne detritus and sediment.

Construction E & S control is essential. Erosion and sediment control during construction is covered in the previously mentioned documents, and is customized to each project via the Stormwater Pollution Prevention Plan or SWPPP. An inspection checklist is provided at the end of this bulletin that includes sediment control. If the PICP is built first and construction traffic must use it, then it will very likely require vacuum cleaning upon construction completion. The ideal situation is PICP constructed late in the project such that it will not receive much construction traffic and sediment. This may require using temporary construction roads.

If PICP receives run-on from upslope pervious or impervious areas, inspect these areas for erosion and sediment, yard waste, materials storage, etc. Sweep or vacuum the contributing drainage area clean and free of any dirt, leaves and mulch as they are a major source of PICP clogging. Lawn and planting beds should be sloped away from PICP areas.

Maintain filled joints with stones. The jointing stones capture sediment at the surface so it can easily be removed. If sediment is allowed to settle and consolidate, then cleaning becomes more difficult since the sediment is inside the joint rather than on the surface. Settlement of



Figure 3. Whether eroded onto or dumped on PICP, erosion and sediment control are essential during construction.



Figure 4. Keeping PICP joints filled with permeable aggregate facilitates removal of accumulated sediment.

jointing stones in the first few months is normal to PICP as open-graded aggregates for jointing and bedding choke into the larger base aggregates beneath and stabilize. This settlement often requires the joints to be refilled with aggregates three to six months after their initial installation. If possible, this should be included in the initial construction contract specifications. Aggregate-filled joints facilitate sediment removal at the surface.

Keeping the joints filled during the PICP service life is essential to trapping sediment and facilitating its removal at the surface. Permeable segmental paving systems that do not use jointing aggregates may incur higher maintenance time and costs to extract accumulated sediment

from deep within the joints and bedding, or eventually move through the base/subbase aggregates onto the subgrade and reduce its infiltration.

Filled paver joints means filled to the bottom of the paver chamfers with jointing stone. If the pavers have very small or no chamfers, then they should be filled within ¼ in. (6 mm) of the paver surface. Should the top of jointing stone settle below ¼ in. (6 mm), vacuum equipment can be less effective in removing sediment and cleaning becomes potentially more expensive.

Manage mulch, topsoil and winter sand. Finally, stockpiling mulch or topsoil on tarps or on other surfaces during site maintenance activities rather than directly on the PICP



Figure 5. Mulch placed on tarps prevents more expensive cleaning of PICP.

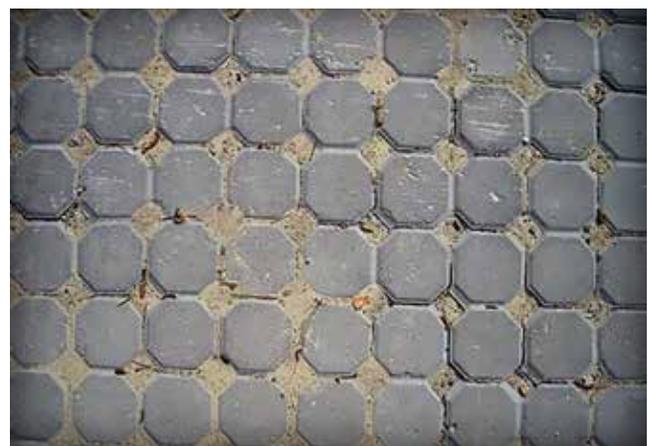


Figure 6. Sand from winter maintenance must be removed the following spring.



Figures 7 and 8. Pine needles and leaves eventually will degrade and get compacted into the joints from traffic. They should be removed by sweeping or vacuuming before that happens.

surface helps maintain infiltration. Figure 5 illustrates an example of correct management of landscaping material on PICP, as well as the need to exposed soil slopes.

Sand used in the winter for traction can be used, but it must be removed with vacuuming in the spring to prevent a substantial decrease in surface infiltration as clogging will increase rapidly. Figure 6 illustrates the consequence to PICP joints when subjected to winter sanding for traction. Using jointing aggregate for winter traction may be a better alternative than using sand because the former has a coarser gradation and can provide some refilling of the joints.

Surface Infiltration Inspection & Testing

Visual Inspection—Effective ways to assess PICP surface infiltration is by conducting visual inspections or tests on the surface before, during and immediately after rainfall.

Inspect Before a Rainfall—Sediment crusted in the joints when dry is the most opportune time to remove it. During dry periods, the sediment layer in each joint can sometimes dry out and curl upward. This layer can be easily loosened by vacuum equipment.

Additionally, deciduous leaves and pine needles eventually get crushed by traffic, degrade, and work their way into the joints, thereby reducing infiltration. See Figures 7 and 8. The site should be inspected for sediments from adjacent eroding areas and those areas stabilized immediately.

Weeds growing from within joints indicate accumulated sediment in the joints and neglected maintenance. See Figure 9. Weeds will not germinate unless there is

accumulated sediment. Weeds should be removed by hand. Herbicide may kill weeds, but dead vegetation and roots will remain. They typically reduce infiltration and should eventually be removed.

Inspect During and Just After a Rainstorm—The extent of puddles and bird baths observed during and especially after rainstorm indicate a need for surface cleaning. A minor amount of ponding is likely to occur particularly at transitions from impervious pavement surfaces to PICP. This often occurs first as sediment is transported by runoff and vehicles. See Figures 10 and 11. Should ponding areas occupy more than 20% of the entire PICP surface, then surface cleaning should be conducted. While a rainstorm's exact conclusion is difficult to predict, standing water on PICP for more than 15 minutes during or after a rainstorm likely indicates a location approaching clogging.



Figure 9. Weeds indicate sediment accumulation and lack of surface cleaning to remove it.



Figure 10. Erosion of adjacent asphalt and sediment deposition on PICP.



Figure 11. Ponding on PICP typically first occurs at the junction with impermeable pavement.



Figure 12. Steps in setting up test equipment for measuring surface infiltration using ASTM C1781.

Test Surface Infiltration—A quick and subjective test for the amount of surface infiltration is pouring water on PICP. If the water spreads rather than infiltrates, the extent of spreading suggests an area that may be clogging. Should more than approximately 20% of the surface area see ponding during or immediately after a rainstorm, a more objective measure of surface infiltration of these areas can

be accomplished using ASTM C1781 *Standard Test Method for Surface Infiltration Rate of Permeable Unit Pavement Systems*. Figure 12 illustrates the test set up using a 12 in. (300 mm) diameter ring set on plumber's putty. (The ring can be metal or plastic.) Figure 13 illustrates the test apparatus in place with water poured into it.



Figure 13. ASTM C1781: pouring the water into a 12 in. (300 mm) inside diameter ring set on plumber's putty.

ASTM C1781 test method begins with “pre-wetting” an area inside the ring to ensure the surface and materials beneath are wet. This is done by slowly pouring 8 lbs (3.6 kg) of water while not allowing the head of water on the paver surface to exceed $\frac{3}{8}$ in. (10 mm) depth. If the time to infiltrate 8 lbs of water is less than 30 seconds (using a stopwatch typically on a cell phone), the subsequent test is done using 40 lbs (18 kg) of water. If more than 30 seconds, then 8 lbs of water is used in the subsequent tests. Again, a $\frac{3}{8}$ in. (10 mm) head is maintained during the pour while being timed with a stopwatch. The surface infiltration rate is calculated using formulas in the test method.

If infiltration measurements on ponded areas consistently result in rates below 20 in./hour (508 mm/hr), they require immediate surface cleaning. PICP surfaces sloped over 2% with less than 40 in./hr infiltrate rate require immediate surface cleaning. An infiltration rate of 20 in./hr equates to 30 minutes' infiltration time and 40 in./hr results in 15 minutes. Table 1 further illustrates the relationship between time for 40 lbs (18 kg) of water to infiltrate and the calculated infiltration rate. ICPI offers a

downloadable calculator for converting time of infiltration to infiltration rates when using C1781. See www.icpi.org/resource-library/software-programs.

Surface Infiltration Maintenance Types

Preventive and Restorative Maintenance—There are two approaches or service types for maintaining PICP surface infiltration: preventive and restorative. Preventive maintenance is done regularly to maintain infiltration. It removes most loose sediment and debris from the surface before being trapped and stuck in the jointing aggregates thereby causing clogging. Preventive maintenance may require reinstatement of a small amount of jointing stones or none at all.

Preventive Maintenance Equipment Options for Maintaining Various Sized PICP Applications

Cleaning Small Pedestrian Areas and Driveways

These are typically under 2,000 sf or 200 m² and include patios, plazas, sidewalks, and driveways. Equipment options follow:

Table 1. ASTM C1781 test results: relationship between time required to infiltrate and calculated surface infiltration rate

Time to infiltrate water [s]	Approximate Surface Infiltration Rate [inches/hr (mm/hr)]	
	8 lbs (3.6 kg) water	40 lbs (18 kg) water
30	235	1175
60	118	587
100	70.5	352
200	35.2	176
360	19.6	97.9
450	15.7	78.3
900	7.8	39.2
1800	3.9	19.6
3600	2	9.8

Note: $I = (K \cdot M) / (D^2 \cdot t)$, where
 I = Surface infiltration rate, in./hr (mm/hr)
 K = 126,870 for lbs (4,583,666,000 for kgs)
 M = water mass, lbs (kg)
 D = ring diameter (12 in. or 300 mm)
 t = time for water to infiltrate in seconds



Figure 14. Bristle broom for removing loose debris



Figure 15. Blowing debris to curbs or gutters for removal and disposal.



Figure 16. Rotary brushes increase cleaning efficiencies.



Hand-held Bristle Broom— Sweep as needed to clear the surface clear of loose debris. Approximate cost: \$15 (Figure 14).

Leaf Blower (electric or gas powered)—A minimum air speed of 120 mph (190 kph) is recommended. Jointing aggregates remain in place while removing loose debris such as leaves from the surface. Approximate cost: \$50 to \$300 (Figure 15).

Rotary Brush with Plastic Bristles—These are often used to spread jointing stone during construction. Same equipment can be used to clean surface to top of joints. Bristles can flip debris out of joints (depends on bristle reach into the joints). A small amount of aggregate may need to be

replaced in the joints after using. Approximate cost: varies depending on operating vehicle. (Figure 16).

Wet/Dry Shop Vacuum or Walk-behind Vacuum—Use equipment with a minimum 4 (peak) HP motor with minimum 130 cubic feet (3.7 m³) per minute suction. These machines can remove some jointing aggregates so they may require replenishment. Approximate cost: \$100 to \$1700 (Figures 17 and 18).

Power Washer—This equipment should be capable of 1,400 to 1,800 psi (9.6 to 12.4 MPa) pressure. Apply the spray at a 30° angle approximately 18 to 24 in. (45 to 60 cm) from the surface and adjust as needed. This equipment will evacuate jointing aggregate and replenishment



Figure 17. Wet/dry shop vacuum cleans loose sediment from a PICP residential driveway



Figure 18. Walk-behind vacuum cleans a small parking area.



Figure 19. Power washing requires a little practice to minimize jointing stone removal.

will be required. Power washing alone generally is not an optimal cleaning approach because there is almost no opportunity on most sites to remove the water-suspended sediment before the water is absorbed back into the pavement. Approximate cost: \$125 to \$1500 (Figure 19).

Cleaning Large PICP Areas

These are typically over 2,000 sf or 200 m² such as large plazas, long sidewalks and driveways, parking lots, alleys and streets. Equipment options follow:

Street Sweepers—These typically have rotating plastic bristle brushes positioned near the curb side and center pickup into a hopper at the rear. Do not use water as it slows removal of loose dirt into the machine. This machine

applies no vacuum force, only mechanical sweeping, so it is least effective among large machines for removing loose sediment in the joints. Approximate cost: \$100 to \$120 per hour from a service company and used by many municipalities (see Figure 20).

Regenerative Air Sweepers—Includes a box positioned under the truck and on the pavement through which air is blown and recirculated (hence the term regenerative air). The pavement must have no convex (or reverse) crown in order to create an adequate seal for suction in the box. Air pressure flowing through it picks up loose debris and sediment. Rotating brushes can be used to direct dirt and debris toward the box. Approximate cost: \$100 to \$120 per hour from a service company. Used by some municipalities. See Figure 21.



Figure 20. Mechanical sweepers use no vacuum making them the least effective of large cleaning machines.

Restorative Infiltration Maintenance for Large Clogged Surfaces

Restorative maintenance is conducted when sediment has lodged in the jointing stones from traffic and weather. The condition indicates that the PICP surfaces have not been regularly cleaned. Restorative maintenance requires some or complete removal of the jointing aggregates to increase infiltration. The depth of jointing stone removed depends on the penetration depth of the sediment into the joints. This can be determined on a sample of a few clogged joints (typically where ponding occurred) by prying out stones and sediment with a flat head screwdriver until little or no accumulated sediment appears.



Figure 21. A regenerative air machine cleaning a PICP parking lot.



Figure 22. A true vacuum machine cleaning neglected PICP.



True Vacuum Sweepers—These can withdraw jointing material and even the concrete pavers. Therefore, the vacuum engine revolutions must be adjusted by the machine operator during a few test runs to find the setting that withdraws the needed depth of sediment and jointing aggregate. After withdrawal, jointing aggregates will require replenishment. The suction orifice is typically about a yard (meter) wide and positioned on the curb side of the truck. Extremely clogged surfaces will require two or more passes. Approximate cost including aggregate replenishment: \$0.20 per sf (\$2.14/m²). Figure 22 shows this machine. It is often used by municipalities to clean out storm drain catch basins and may require a separate vacuum attachment to clean pavements.

Combined Power Washing and Vacuum Equipment—This machine includes power washing between 1,200 psi (8 MPa) at 4300 psi (30 MPa) with turbine blades to create a vacuum. Most of the water is recovered and recircu-

lated. Jointing stones are dispersed on the surface and can be reinstated. Some joints will require replenishment. Extremely clogged surfaces will require two or more passes. Productivity is approximately 10,000 sf/hour (1,000 m²/hour) assuming two passes with the equipment illustrated in Figure 23. This type of equipment is also designed into a truck for large (street) areas and a walk-behind device for small areas.

Inspection Intervals and Procedures for Maintaining Surface Infiltration

Preventive maintenance provides the best infiltration performance by implementing the following procedures:

1. **Weekly**—Prevent contamination from routine landscape maintenance such as grass clippings from mowing, hedge trimming, mulching plant beds, etc. by:
 - Broom sweep debris from the paver surface, or



Figure 23. Equipment that provides combined power washing and vacuum

- Blow debris from the paver surface with a powered leaf blower onto other surfaces that will not re-transmit it to the PICP surface.
- Mechanically sweep paver surface.
- Remove loose debris, leaves, needles, sediment, topsoil, mulch, etc. after severe rain storms using the above procedures.
- Collect and dispose of debris.

2. Semi-annually—Remove loose surface debris from the pavers and jointing stones (1) when trees have defoliated in the fall and (2) at the end of winter snowfall.

- Use a wet/dry vacuum for small areas and a regenerative air machine for larger areas.
- Replenish jointing stone as needed to the bottom of the paver chamfers.
- Check any observation wells and outlet pipes from underdrains to confirm drain down and water outflows.

3. Six to ten years—Based on observation and during rainstorms and subsequent surface infiltration tests, remove and replenish the jointing stones and sediment using restorative cleaning equipment and procedures.

Note: Various factors will affect each project’s preventive maintenance schedule and each must be reviewed individually.

Winter Maintenance

Snow Removal—Unlike other permeable pavement surfaces, PICP demonstrates durability in the winter. PICP can be plowed with steel or hard rubber blades. Steel blades typically scratch all pavement surfaces. When using commercial snow removal companies, confirm in writing they provide protective edges on the snowplow equipment to

avoid scratching the surface. Most pavers have chamfers on their surface edges which can help protect the edges from chipping by snow plows. For smaller areas, use a plastic snow shovel and fit snow blowers with plastic on the scoops and on the gliders. When possible deposit plowed snow onto grassy areas and not on the PICP when the plowed snow is dirty. Such dirt will remain and likely help clog the PICP surface after the snow melts.

Deicers—When used sparingly, deicers should not damage PICP surfaces as the brine typically forms on the surface to lower the freezing temperature of water and eventually moves into the joints with melting ice or snow. Some deicers will accelerate surface wear on some styles of pavers with blasted or hammered surfaces. Sealers may help reduce the risk of damage.



Figure 24. This is an example of snow that should have been deposited on a grassy area. If such areas are not available, then vacuum clean the PICP in the early spring.

Table 2. Maintenance guidelines for all PICP distresses

Distress	Activity	Frequency
Clogging	Vacuum sweep surface to remove sediment.	1 to 2 times annually; adjust frequency based on sediment loading
Clogged/Damaged Secondary Features	Clean out or repair secondary drainage features.	Annually, after major rain event
Depressions	Repair all paver surface depressions, exceeding 0.5 in. (13 mm)	Annually, repair as needed
Rutting	Repair all paver surface rutting, exceeding 0.6 in. (15 mm)	Annually, repair as needed
Faulting	Repair all paver surface faulting, exceeding 0.25 in. (6 mm)	Annually, repair as needed
Damage Paver Units	Replace medium to high severity cracked, spalled or chipped paver units.	Annually, repair as needed
Edge Restraint Damage	Repair pavers offset by more than 0.25 in. (6 mm) from adjacent units or curbs, inlets, etc.	Annually, repair as needed
Excessive Joint Width	Repair pavers exhibiting joint widths exceeding 0.5 in. (13 mm)	Annually, repair as needed
Joint Filler Loss	Replenish aggregate in joints.	As needed
Horizontal Creep	Repair areas exhibiting horizontal creep exceeding 0.4 in. (10 mm)	Annually, repair as needed
Additional Distresses	Missing pavers shall be replaced. A geotechnical investigation is recommended for pavement heaves.	Annually, repair as needed

Deicer types acceptable for use in on PICP surfaces include sodium chloride, calcium chloride and potassium chloride. Do not use magnesium chloride as it will eventually destroy all concrete materials. Anti-icing agents that contain ammonium nitrate and ammonium sulfate should not be used since they can also erode concrete. Always read and follow the manufacturer’s recommendations for use and heed all warnings and cautions.

Remedial Maintenance for Other Distresses

Over time and traffic, PICP can exhibit other distresses besides surface ponding from clogged joints. These are outlined in Table 2 and remedies are provided.

Utility Restoration Guidelines

1. Remove and store pavers for reuse. Secure undisturbed pavers in opening with wood or metal frame.

2. Remove and dispose of all jointing and bedding aggregate as they typically cannot be re-used.
3. Remove the aggregate base and subbase material. Incidental mixing of base and subbase aggregates is acceptable, but make every effort to separate them. Store in on impermeable pavement or a geotextile to prevent contamination. Do not reuse contaminated aggregate.
4. Re-compact subgrade material as required for stability during utility repairs.
5. Repair or install utility as required.
6. If below the bottom of the subbase, place and compact dense-graded road base in lifts not exceeding 6 in. (150 mm) and compact to 100 percent of standard Proctor maximum dry density. The top of the dense-graded aggregate should be at the same elevation as the bottom of the open-graded subbase aggregate.
7. Reinstate and compact the subbase aggregate in minimum 6 in. (150 mm) lifts. Use a minimum 13,500 (65 kN) plate compactor with a compaction indicator. Add new subbase aggregate if needed.
8. Reinstate and compact the base aggregate as one 4 in. (100 mm) lift. Use a minimum 13,500 lbf (65 kN) plate compactor with a compaction indicator. A lightweight deflectometer (LWD) can be used to ensure that deflections of the compacted base aggregate are below an average of 0.5 mm (assuming a minimum 12 in. (300 mm)) compacted aggregate subbase. An LWD should be used according to ASTM E2835.
9. Place and screed new bedding aggregate in a consistent thickness layer between 1.5 and 2 in. (38 and 50 mm).
10. Reinstate pavers with at surface at least 1 in. (25 mm) higher than the final elevation. Compact the pavers in two perpendicular directions with a minimum 5,000 lbf (22 kN) plate compactor. Fill joints with aggregate, sweep away excess, and compact the pavers in two perpendicular directions again. Compact pavers so they are level with surrounding pavers.
11. Sweep surface clean and remove any excess aggregate and debris.

Other recommendations include keeping all removed materials clean and free of sediment and debris. Minimize excess debris from construction activities and equipment entering the permeable surface. Store all materials away from the permeable surface, otherwise separate materials from the permeable surface with geotextile. Pavement cuts located parallel and close to the wheel path should be extended to include the wheel path. Cuts located within 3 ft (1 m) of a curb or construction joint should include the removal of the adjacent base and subbase to the edge of the curb or construction joint.



Interlocking Concrete
Pavement Institute®

14801 Murdock Street
Suite 230
Chantilly, VA 20151

Tel: 703.657.6900
Fax: 703.657.6901
E-mail: icpi@icpi.org
www.icpi.org

In Canada:
P.O. Box 1150
Uxbridge, ON L9P 1N4
Canada

The content of ICPI Tech Spec technical bulletins is intended for use only as a guideline. It is not intended for use or reliance upon as an industry standard, certification or as a specification. ICPI makes no promises, representations or warranties of any kind, expressed or implied, as to the content of the Tech Spec Technical Bulletins and disclaims any liability for damages resulting from the use of Tech Spec Technical Bulletins. Professional assistance should be sought with respect to the design, specifications and construction of each project.

BOD Approved: February 2017